BORMANN® PRO

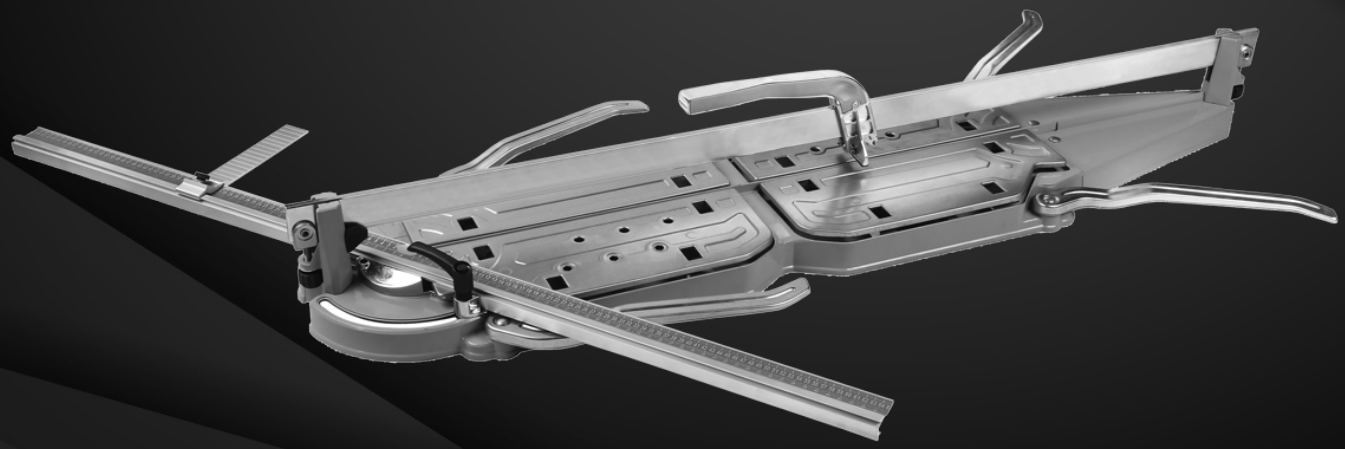

BTC3000 - BTC3250 | ΚΟΦΤΗΣ ΠΛΑΚΙΔΙΩΝ

GR Μετάφραση του πρωτοτύπου των οδηγιών χρήσης

GB Owner's manual

www.BormannTools.com

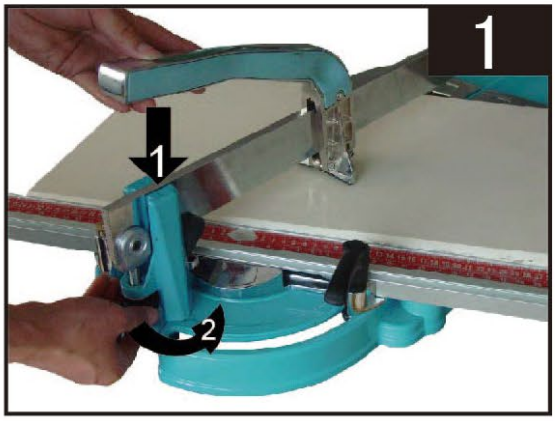

1.Για να ρυθμίσετε το ύψος της χειρολαβής στην ιδανική θέση για την κοπή του πλακιδίου, γυρίστε την ρυθμιστική ροδέλα (Εικ.1).

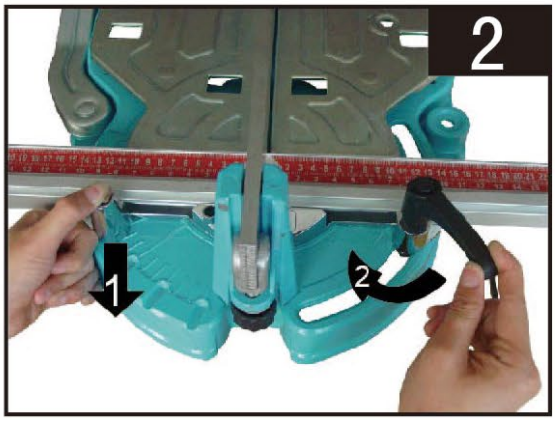

2. Πιέστε προς τα κάτω την βίδα ρύθμισης για να μηδενίσετε την διαβαθμισμένη κλίμακα, ο δείκτης του κινούμενου μέρους και η διαβαθμισμένη κλίματα θα πρέπει να βρίσκονται στο ίδιο σημείο της επιθυμητής τιμής. Περιστρέψτε το λεβιέ για να το ασφαλίσετε στην θέση του (Εικ2).

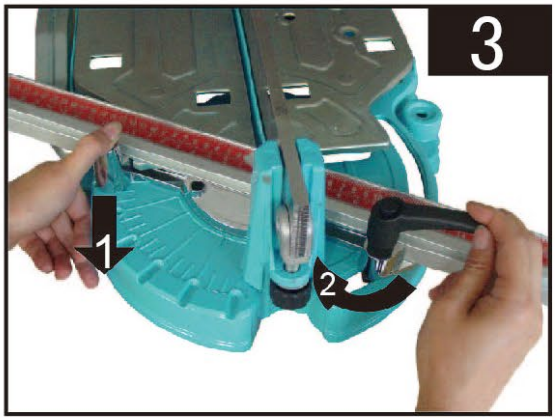

3. Πιέστε προς τα κάτω την βίδα ρύθμισης για να ρυθμίσετε την κλίση στην επιθυμητή θέση (0^0 - 45^0). Έπειτα σφίξτε το λεβιέ (Εικ.3).

www.BormannTools.com

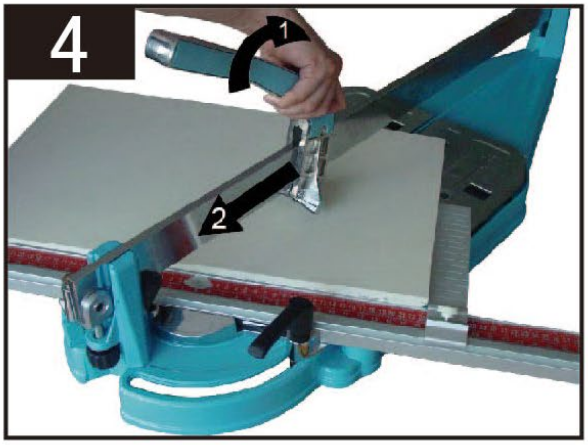

4. Μετά το τέλος των παραπάνω ρυθμίσεων, σηκώστε προς τα πάνω τη χειρολαβή, φέρτε σε επαφή το εξάρτημα κοπής με την επιφάνεια του πλακιδίου και κάντε μια τομή αργά και σταθερά (Εικ.4).

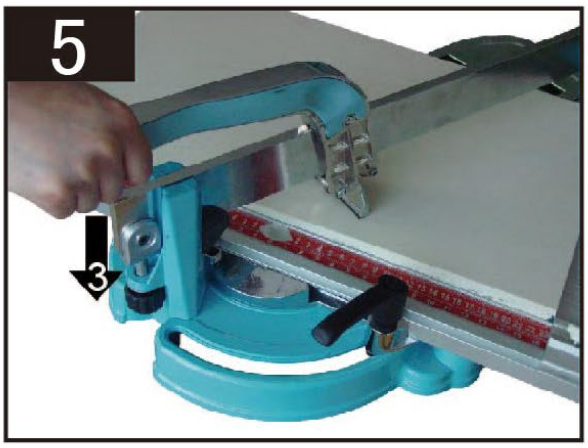

5. Μετά το τέλος της διαδικασίας κοπής, θέστε την χειρολαβή κοντά στο προφίλ του πλακιδίου και πιέστε προς τα κάτω ώστε να αποκοπεί το τεμαχισμένο τμήμα του (Εικ.5).

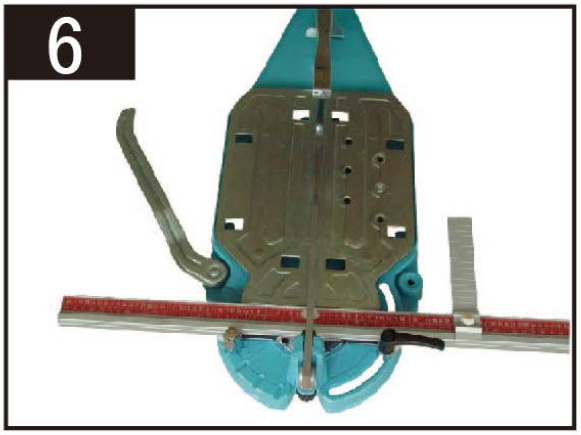

6. Για την διευκόλυνση σας κατά την διαδικασία κοπής ο βραχίονας της εικόνας μπορεί να ρυθμιστεί στην επιθυμητή θέση (Εικ.6).

www.BormannTools.com

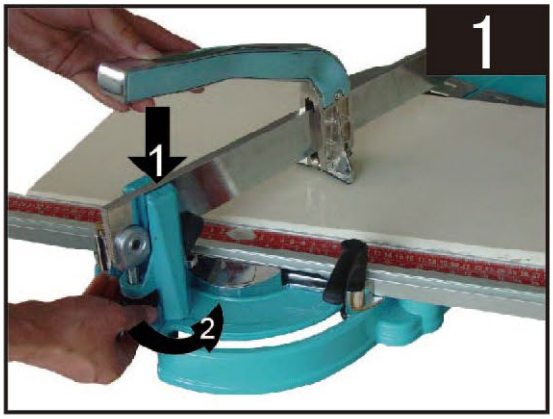

1.Before operating, adjust the adjusting screw to make the height of handle in perfect position to cut the tile easily. (Figure 1)

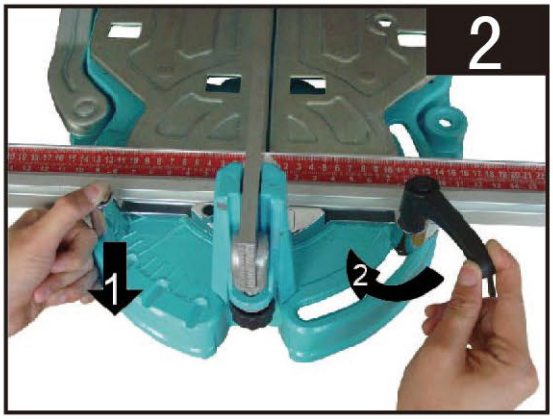

2.Press down the locating screw to zero graduation line, make it and pointer of swivel overlaping. Then tighten the clamp handle, make scaleplate and pressure line overlaping. (Figure 2)

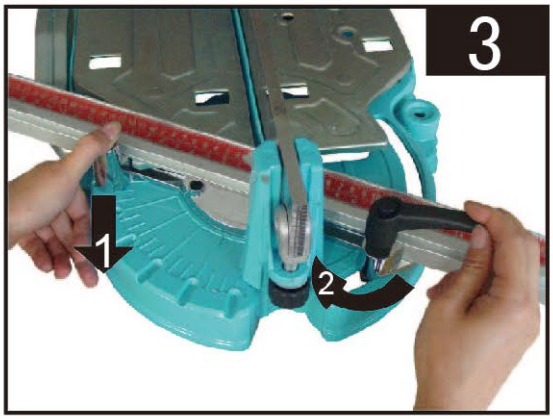

3.Press down the locating screw to make it locate in any degrees from 0 to 45°. Then tighten the clamp handle. (Figure 3)

www.BormannTools.com

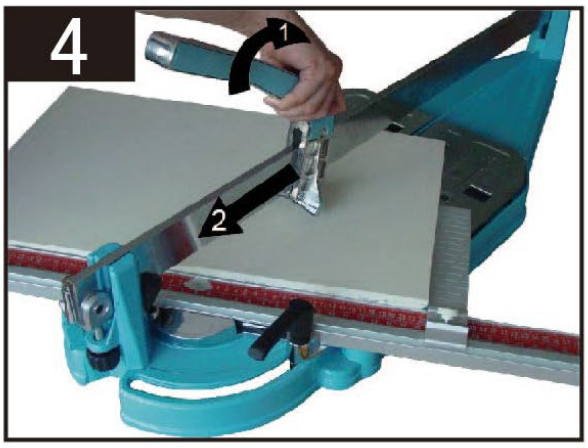

4.After locating, lift the handle, make the cutting wheel on the tile, and cut the tile slowly. (Figure 4)

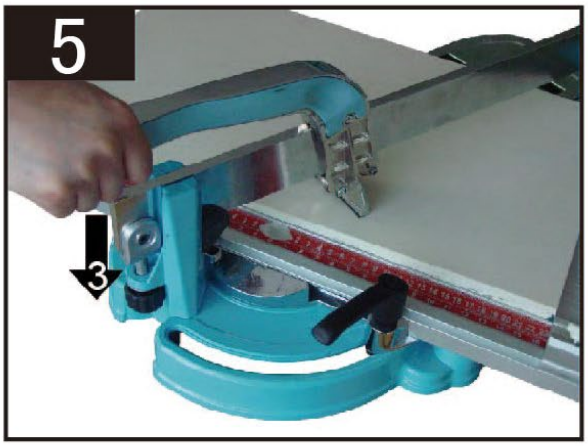

5.After cutting, put handle near the end face of the tile, then push down, making the tile break. （Figure5）

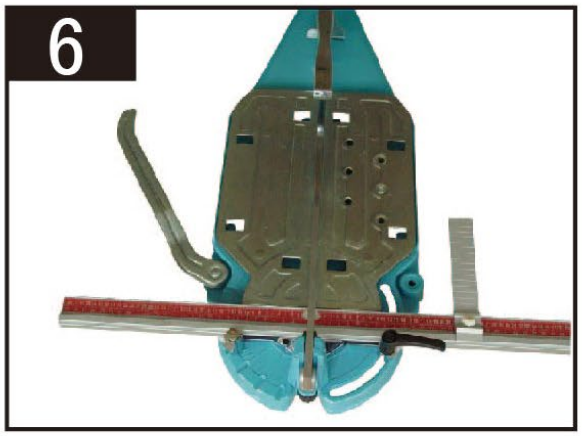

6.When cutting the tile, outspread bracket can be unfolded for operating conveniently. (Figure 6)

www.BormannTools.com

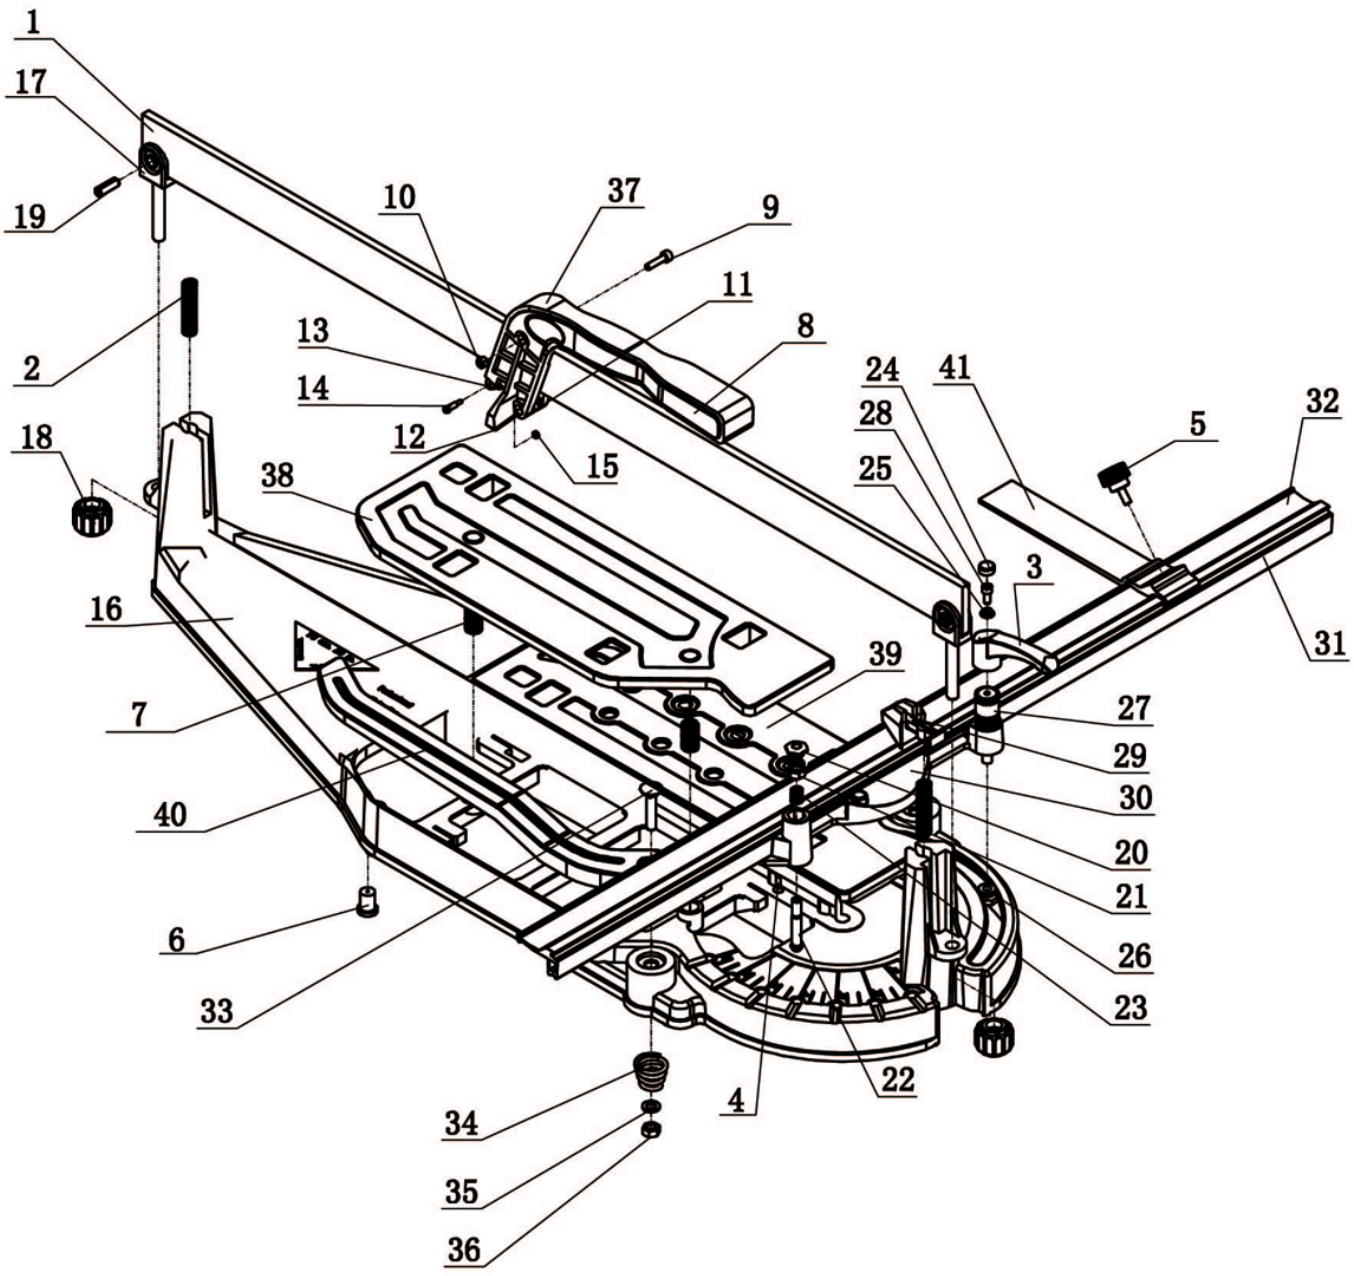

www.BormannTools.com

1	guide rod	15	self-hold hex nut	29	bumper block
2	regulating spring	16	base frame	30	swivel plate
3	clamp handle	17	adjusting screw rod	31	scaleplate
4	cross-shaped countersunk head tapping screw	18	adjusting screw	32	scaleplate paster
5	short angle square clamp handle	19	elastic cylindrical pin	33	square neck screw
6	base leg	20	angle locating rod nut	34	conical spring
7	panel spring	21	hex nut	35	flat washer
8	handle lid	22	angle locating rod	36	self-hold hex nut
9	inner hexagon bolt	23	compressed spring	37	handle
10	self-hold hex nut	24	clamp handle lid	38	left panel
11	bearing roller	25	small conical spring	39	right panel
12	breaking washer	26	lock nut	40	outspread bracket
13	cutting wheel	27	lock screw	41	short angle square
14	wheel shaft	28	inner hexagon bolt		

www.BormannTools.com

DISPOSE OF
PACKAGING
RESPONSIBLY

DO NOT DISPOSE
OF ELECTRICAL GOODS
IN HOUSEHOLD WASTE